

SAFETY & WARNINGS

1. This product is rated for indoor installation and is not protected against moisture.
2. Do not modify product beyond instructions or warranty will be void.

QUICK SPECS / MODELS


DI-RF-REM-RGBW-4



Input	Operating Frequency
3x AAA 1.5V Batteries (Not Included)	434MHz / 868 MHz

SUPPLIED ACCESSORIES

TOUCHDIAL Remote Control Mounting Bracket

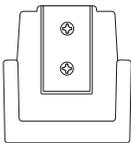

TOOLS FOR INSTALL


Phillips-head screwdriver
(For mounting TOUCHDIAL Remote Control Mounting Bracket)



ADDITIONAL TOUCHDIAL COMPONENTS



DI-RF-REC-CV-A
TOUCHDIAL Receiver

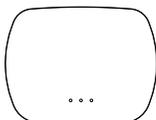

DI-WIFI-RF-TRMS
TOUCHDIAL WiFi Hub

SYNCING INSTRUCTIONS

1 INSTALL TOUCHDIAL RECEIVER SYSTEM

 
Refer to TOUCHDIAL Receiver Installation Guide.



LED Driver



TOUCHDIAL Receiver



LED Luminaire

2 SYNC MASTER RECEIVER TO TOUCHDIAL CONTROL

Add 3x AAA batteries (not included).



a. Wake up TOUCHDIAL control by pressing Power button.



b. Press LEARNING KEY button on TOUCHDIAL MASTER receiver.




c. (1) Press any zone button on control, then (2) swipe finger on color wheel.

d. Luminaire will flash to indicate pairing.

SYNCING CONT.

SYNCING NOTE

When syncing the TOUCHDIAL Remote, the 1st receiver must be set to the MASTER function as outlined below. See the TOUCHDIAL Receiver Installation Guide for more thorough information.

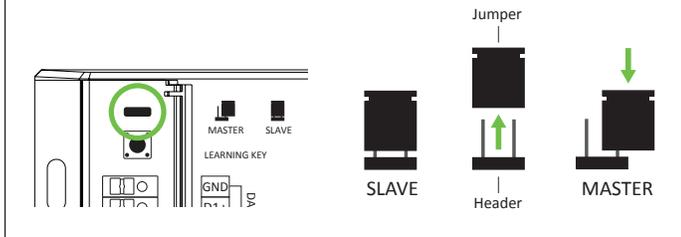


TROUBLESHOOTING

See *TOUCHDIAL Receiver and WIFI Hub Install Guide* for more troubleshooting tips.

Symptom	Common Cause
Remote won't function	<ul style="list-style-type: none"> Check for dead AAA batteries. Remote must be turned on for operation (red indicator light on).
Master receiver does not sync with remote	<ul style="list-style-type: none"> Ensure function is set to MASTER (1 pin) - See Syncing Note or TOUCHDIAL Receiver Installation Guide. If still not syncing do following: 1) Turn off main power to receiver and turn back on. 2) Reset receiver by holding LEARNING KEY for 5 seconds until LED flashes. 3) Re-sync receiver to control.

OPERATION

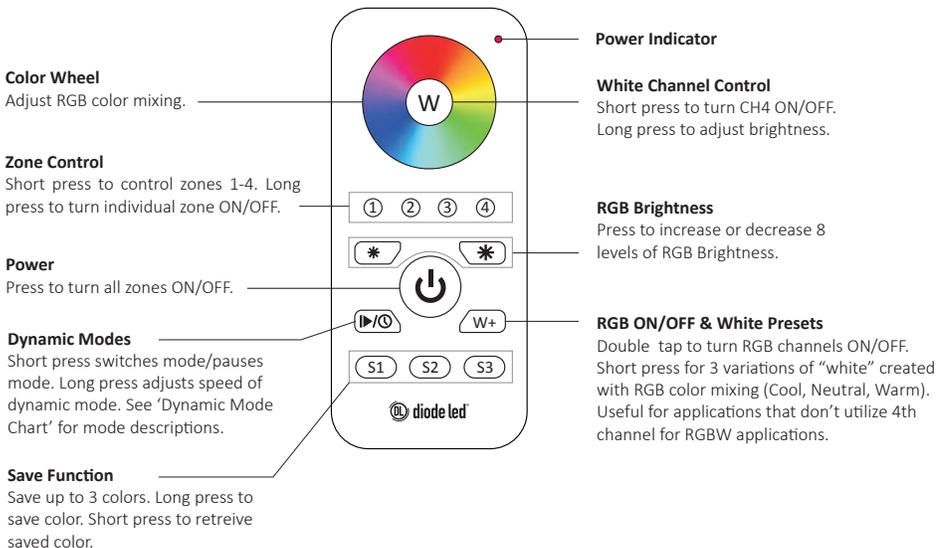

DYNAMIC MODE CHART

Mode	Description
1	Random Fade
2	Random Fade
3	Random Fade
4	Random Fade
5	RGB Fade In/Out
6	RGB Fade In
7	RGB Fade Out
8	RGB Skip
9	Random Fade
10	Random Fade

ADDITIONAL RESOURCES

Visit the product web page at www.DiodeLED.com for additional product specifications & warranty information.

TOUCHDIAL RGB/RGBW 4-ZONE REMOTE CONTROL SPECIFICATION SHEET

For full specifications.

TOUCHDIAL RECEIVER SPECIFICATION SHEET & INSTALL GUIDE

For full specifications and installation instructions.

TOUCHDIAL WIFI HUB SPECIFICATION SHEET & INSTALL GUIDE

For full specifications and installation instructions.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | www.DiodeLED.com | info@DiodeLED.com
© 2015 Elemental LED Inc. All rights reserved. Specifications are subject to change without notice.