ALLOY $L \equiv D^{\circ}$

SlimDim[™] Wireless Color Controller AL-60-03-0009



Specifications

- Dimensions: 2.6 x 1.3 x 0.35 in.
- Battery Type: CR2032
- RF Freq.: 868/915/434MHz
- Max. receivers per remote control: 20


Operation

How to Pair the SlimDim RGB/RGB-W Controller with the Wireless Receiver (AL-60-03-0004)

- 1. Connect the components according to the diagram below.
- 2. Open the battery compartment and remove the plastic tab next to the battery.
- 3. Wake up the controller by touching the ON/OFF button. The power indicator will light up.
- 4. Short press the "Learning Key" button on the receiver for one second or less.
- 5. Touch the "RGB" button on the controller.
- 6. The connected LED lights will blink to confirm the pairing.

How to Unpair the Receiver and Controller

1. Hold down the "Learning Key" button on the receiver for 5 seconds. When the LED lights flash, the controller has been unpaired.

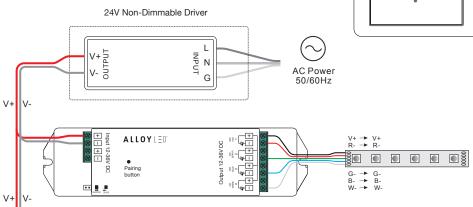

SlimDim Wireless Dimmers are a revolution in lighting control. Using long range RF technology, these dimmers avoid the need for connecting directly to a power supply, cutting down on cost and installation time. SlimDims are simple and quick to install.


- Mount anywhere: on a wall or in an outlet
- Fob controller detaches for mobile, hand-held control
- Basic color control for Radialux[®] RGB / RGB-W tape: pair with the Wireless RGB/RGB-W Receiver (AL-60-03-0004)
- Dimmers and receivers are sold separately

AL-60-03-0009 RGB/RGB-W Cont	roller
------------------------------	--------

AL-60-03-0004 Wireless RGB/RGB-W Receiver (sold separately)

Keypad

Press and hold this button to dim. The next time you press and hold the button, the brightness will increase.

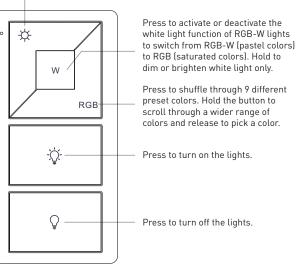

www.AlloyLED.com / support@AlloyLED.com / 800.910.LEDS (5337)