



TOUCHDIAL™ 5-Zone Remote Control Dimmer




INSTALLATION GUIDE

SAFETY & WARNINGS

1. This product is rated for indoor installation and is not protected against moisture.
2. Do not modify product beyond instructions or warranty will be void.

QUICK SPECS / MODELS

DI-RF-REM-DIM-5

	Input 1x CR2032 3V Battery (Included)	Operating Frequency 434MHz / 868 MHz
----------------------------------------------------------------------------------	-------------------------------------------------	------------------------------------------------

SUPPLIED ACCESSORIES

TOUCHDIAL Dimmer Control Mounting Bracket & Screws



TOOLS FOR INSTALL

Phillips-head screwdriver
(For mounting TOUCHDIAL Dimmer Control Mounting Bracket)




ADDITIONAL TOUCHDIAL COMPONENTS

 DI-RF-REC-CV-A
TOUCHDIAL Receiver


 DI-WIFI-RF-TRMS
TOUCHDIAL WiFi Hub

SYNCING INSTRUCTIONS

- 1** **INSTALL TOUCHDIAL RECEIVER SYSTEM**
Refer to TOUCHDIAL Receiver Installation Guide.

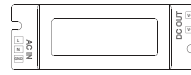

LED Driver

 


TOUCHDIAL Receiver




LED Luminaire

- 2** **SYNC MASTER RECEIVER TO TOUCHDIAL DIMMER**

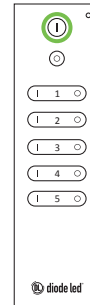

a. Wake up TOUCHDIAL dimmer by pressing Power button.

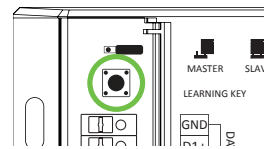

b. Press LEARNING KEY button on TOUCHDIAL MASTER receiver.




c. Press any zone button on control.

d. Luminaire will flash to indicate pairing.

SYNCING CONT.

SYNCING NOTE

When syncing the TOUCHDIAL Dimmer, the 1st receiver must be set to the MASTER function as outlined below. See the TOUCHDIAL Receiver Installation Guide for more thorough information.

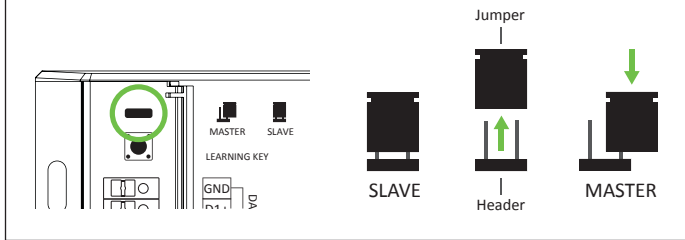

TROUBLESHOOTING


See TOUCHDIAL Receiver Install Guide for more troubleshooting tips.

Symptom	Common Cause
Remote won't function	<ul style="list-style-type: none"> Check for dead CR2032 battery. Remote must be turned on for operation.
Master receiver does not sync with remote	<ul style="list-style-type: none"> Ensure function is set to MASTER (1 pin) - See Syncing Note or TOUCHDIAL Receiver Installation Guide. If still not syncing do following: 1) Turn off main power to receiver and turn back on. 2) Reset receiver by holding LEARNING KEY for 5 seconds until LED flashes. 3) Re-sync receiver to control.

OPERATION

Master Zone Control

- |** Short press to turn zone ALL ZONES ON.
Long press to increase brightness.
- Short press to turn ALL ZONES OFF.
Long press to decrease brightness.

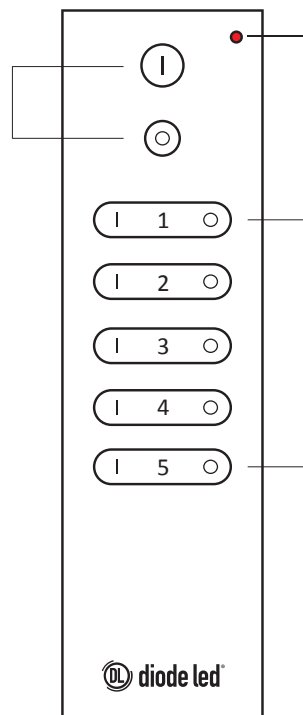

Power Indicator

Indicator will flash red when data is transmitting.

Single Zone Control

- |** Short press to turn SINGLE ZONE ON.
Long press to increase brightness.
- Short press to turn SINGLE ZONE OFF.
Long press to decrease brightness.

SYSTEM DIAGRAMS

See the TOUCHDIAL RECEIVER Installation guide for SOLID COLOR system diagrams.

ADDITIONAL RESOURCES

Visit the product web page at www.DiodeLED.com for additional product specifications & warranty information.

TOUCHDIAL 5-ZONE REMOTE CONTROL DIMMER SPECIFICATION SHEET

For full specifications.

TOUCHDIAL RECEIVER SPECIFICATION SHEET & INSTALLATION GUIDE

For full specifications and installation instructions.

TOUCHDIAL WIFI HUB SPECIFICATION SHEET & INSTALLATION GUIDE

For full specifications and installation instructions.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | www.DiodeLED.com | info@DiodeLED.com
© 2015 Elemental LED Inc. All rights reserved. Specifications are subject to change without notice.